

森力电机安装尺寸表

安装形式	机座号	安装尺寸										外形尺寸					
		A	A/2	B	C	D	E	F	G	H	K	AB	AC	AD	HD	L	
卧式安装 B3	45	71	35.5	56	28	9	20	3	7.2	45	4.8	90	100		115	150	
	50	80	40	63	32					50	5.8	100	110		125	155	
	56	90	45	71	36					56		115	120		135	170	
	63	100	50	80	40	11	23	4	8.5	63	7	130	130	125	165	230	
	71	112	56	90	45	14	30	5	11	71		145	145	140	180	255	
	80	125	62.5	100	50	19	40	6	15.5	80	10	160	165	150	200	295	
	90	S L	140	70	100	56	24	50	8	20		90	180	185	160	220	310
125					335												
立式安装 B34		D	E	F	G	M	N	P	R	S	T	AB	AC	AD	HD	L	
	45	A. A/2. B. C. D. E. F. G. H. K 尺寸同 B3 型				45	32	60	0	M5	2.5	AB. AC. AD. HD. L 尺寸同 B3 型					
	50					55	40	70									
	56					65	50	80									
	63					75	60	90	0	M6							
	71					85	70	105									
	80					100	80	120									
90	S L	115	95	140	0	M8	3.0										
									D	E	F	G	M	N	P	R	S
立式小法兰 安装 B14	45	9	20	3	7.2	45	32	60	0	M5	2.5	100		150			
	50					55	40	70				110		155			
	56					65	50	80				120		170			
	63	11	23	4	8.5	75	60	90	0	M6		130	125	220			
	71	14	30	5	11	85	70	105				145	140	255			
	80	19	40	6	15.5	100	80	120				165	150	295			
90	S L	24	50	8	20	115	95	140	0	M8	3.0	185	160	310			
												355					
立式大法兰 安装 B5		D	E	F	G	M	N	P	R	S	T	AC	AD	L			
	63	11	23	4	8.5	115	95	140	0	10	3.5	3	130	125	250		
	71	14	30	5	11	130	110	160				145	140	275			
	80	19	40	6	15.5	165	130	200				165	150	300			
90	S L	24	50	8	20				12	3.5		185	160	335			
						360											